

- 1 Power the pi-top[4] on by sliding the power button to the left.



- 2 Press the blue down arrow on the pi-top, until you see the IP address for your pi-top.



If you are using a cable or AP mode see <https://knowledgebase.pi-top.com/knowledge/connecting-with-your-pi-top4> to find your IP address.


- 3 On a device (computer, laptop, iPad, phone, etc.) open a tutorial or challenge @ <https://further.pi-top.com/explore>



- 4 At the bottom right of the Further Window find and click on the pi-top icon.



- 5 In the "Device IP Address" box, type the IP address number you shown on your pi-top. The periods must be entered as well.

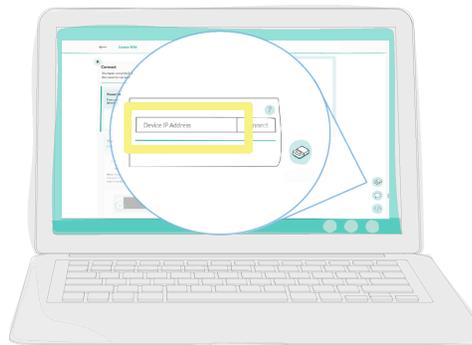

- 6 Click connect. The word "connect" should change to "disconnect" when the connection is successful.

